

Tensor DL screwdrivers

Where every fastener counts!



Atlas Copco



...first time, every time!

Tensor DL non-transducerized screwdrivers exist in four different tool configurations:

ETD – Straight screwdrivers with configurable function button. Available as lever and push to start.

ETV – Right angle screwdrivers with lever start and configurable function button.

ETP – Pistol grip handle screwdriver with configurable function button. Available as lever and push to start.

ETF – Straight screwdrivers for fixtured applications. Configurable lever or remote start.

- The DL screwdriver range has been optimized for small screw assembly.
- Torque range up to 12 Nm.
- All tools have ESD certification.
- Ergonomic design promotes operator safety.
- Brushless motor gives long service intervals and low maintenance costs.
- Signal lights ensure detection of incorrectly tightened fasteners.



Model	Torque		Speed r/min	Weight		Length mm	CS distance ^a mm	Ordering No.
	Nm	in lb		kg	lb			
Straight tools (lever start)								
ETD DL21-04-I06	1 - 4	8.8 - 35.4	1600	0.6	1.3	235	18 / 19.5	8433 4014 25
ETD DL21-07-I06	2.2 - 7.5	19.5 - 66	970	0.6	1.3	235	18 / 19.5	8433 4017 31
ETD DL21-10-I06	3 - 10	26.6 - 88.5	720	0.6	1.3	235	18 / 19.5	8433 4019 10
Straight tools (push-to-start and front lights)								
ETD DL21-01-I06-PS	0.3 - 1.2	2.6 - 10	2200	0.6	1.3	243	18 / 19.5	8433 4010 89
ETD DL21-04-I06-PS	1 - 4	8.8 - 35.4	1600	0.6	1.3	243	18 / 19.5	8433 4014 91
ETD DL21-07-I06-PS	2.2 - 7.5	19.5 - 66	970	0.6	1.3	243	18 / 19.5	8433 4017 69
ETD DL21-10-I06-PS	3 - 10	26.6 - 88.5	720	0.6	1.3	243	18 / 19.5	8433 4019 25
Right angle tools (lever start)								
ETV DL21-04-I06	1 - 4	8.8 - 35.4	1600	0.7	1.5	268	9	8433 4004 47
ETV DL21-04-I06-QC	1 - 4	8.8 - 35.4	1600	0.7	1.5	268	9	8433 4004 73
ETV DL21-04-I06	1 - 4	8.8 - 35.4	1600	0.7	1.5	268	9	8433 4004 91
ETV DL21-07-I06	2.2 - 7.5	19.5 - 66	970	0.7	1.5	268	9	8433 4007 66
ETV DL21-07-I06-QC	2.2 - 7.5	19.5 - 66	970	0.7	1.5	268	9	8433 4007 79
ETV DL21-07-I06	2.2 - 7.5	19.5 - 66	970	0.7	1.5	268	9	8433 4007 94
ETV DL21-10-I06	3 - 12	26.6 - 106.4	610	0.7	1.5	282	11	8433 4009 34
ETV DL21-10-I06-QC	3 - 12	26.6 - 106.4	610	0.7	1.5	282	11	8433 4009 61
ETV DL21-10-I06	3 - 12	26.6 - 106.4	610	0.7	1.5	282	11	8433 4009 77
Pistol grip (lever start)								
ETP DL21-04-I06	1 - 4	8.8 - 35.4	1600	0.6	1.3	235	20	8433 4024 19
ETP DL21-07-I06	2.2 - 7.5	19.5 - 66	970	0.6	1.3	235	20	8433 4027 26
ETP DL21-10-I06	3 - 10	26.6 - 88.5	720	0.6	1.3	235	20	8433 4029 13
Pistol grip (push-to-start and front lights)								
ETP DL21-01-I06-PS-H	0.3 - 1.2	2.6 - 10	2200	0.6	1.3	243	20	8433 4020 77
ETP DL21-04-I06-PS-H	1 - 4	8.8 - 35.4	1600	0.6	1.3	243	20	8433 4024 66
ETP DL21-07-I06-PS-H	2.2 - 7.5	19.5 - 66	970	0.6	1.3	243	20	8433 4027 53
ETP DL21-10-I06-PS-H	3 - 10	26.6 - 88.5	720	0.6	1.3	243	20	8433 4029 28
Fixtured tools (lever start or remote start)								
ETF DL21-01-I06-T25	0.3 - 1.2	2.6 - 10	2200	0.7	1.5	328	18 / 19.5	8433 4040 04
ETF DL21-04-I06-T25	1 - 4	8.8 - 35.4	1600	0.7	1.5	328	18 / 19.5	8433 4042 13
ETF DL21-07-I06-T25	2.2 - 7.5	19.5 - 66	970	0.7	1.5	328	18 / 19.5	8433 4043 22
ETF DL21-10-I06-T25	3 - 10	26.6 - 88.5	720	0.7	1.5	328	18 / 19.5	8433 4044 11

^a For ETV, CS distance over angle head.